


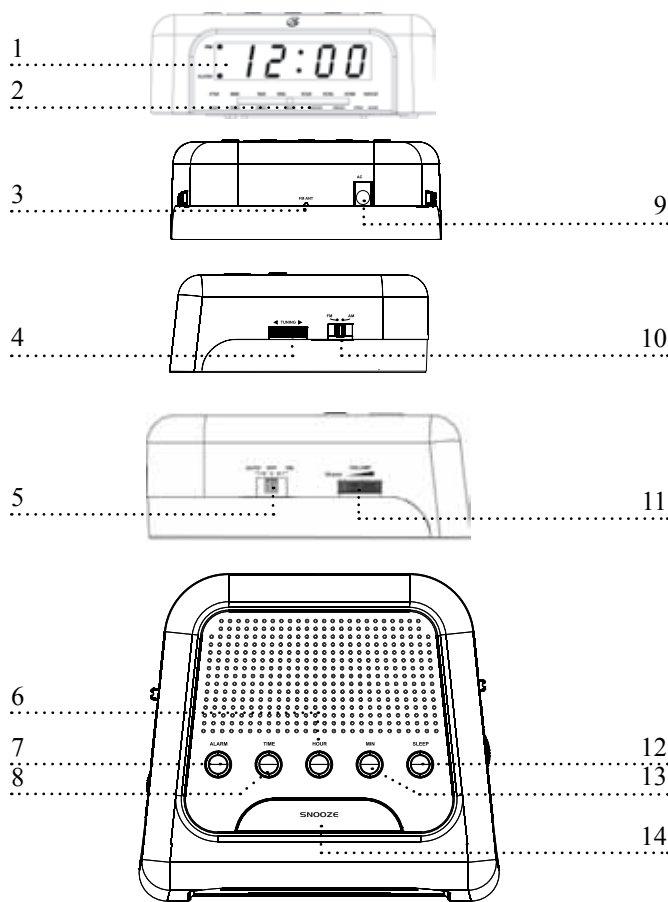

1 LED Display	The LED Display displays the time, an AM indicator, and an Alarm indicator.
2 Radio Frequency Indicator	Use the Radio Frequency Indicator to view the current AM or FM radio station.
3 FM Antenna	A wire FM Antenna is attached to the unit. Adjust the wire to improve the FM radio reception. The AM Antenna is built into the unit. To improve AM reception, adjust the position of the unit.
4 Tuning Dial	Turn the Tuning Dial to adjust the AM or FM radio station.
5 Auto/Off/On Switch	Adjust the Auto/Off/On Switch to On to power on the unit's FM or AM radio. Adjust the Auto/Off/On Switch to Off to power off the unit's FM or AM radio. Adjust the Auto/Off/On Switch to Auto turn the alarm on.
6 Hour Button	Press the Hour Button to adjust the hour when setting the time.
7 Alarm Button	Press the Alarm Button to view the Alarm Time. Press and hold the Alarm Button to allow the Alarm Time to be edited.
8 Time Button	Press and hold the Time Button to allow the time to be edited.
9 AC Power Input	Use the AC Power Input to connect an AC adapter to the unit. Plug the other end of the AC adapter into a standard AC outlet (120V ~60Hz).
10 FM/AM Switch	Adjust the FM/AM Switch to select AM or FM radio.
11 Volume/Buzzer Dial	Turn the Volume/Buzzer Dial to adjust the unit's volume. Turn the Volume/Buzzer Dial towards "Buzzer" until the dial won't turn anymore to set the alarm to wake to the buzzer.
12 Sleep Button	Press the Sleep Button to reset the sleep timer to it's default time of 59 minutes. Press and hold the Sleep Button to allow the sleep time to be edited.
13 Minute Button	Press the Minute Button to adjust the minute when setting the time.
14 Snooze Button	Press the Snooze Button to delay the alarm for an additional 9 minutes after it has sounded.

Limited 90 Day Warranty

The Manufacturer warrants this product to the original purchaser to be free from defects in material and workmanship, under normal conditions, for a period of 90 days from date of original purchase.

The Manufacturer agrees, at its option during the warranty period, to repair any defect in material or workmanship or to furnish a repaired or refurbished product of equal value in exchange without charge. Such repair or replacement is subject to verification of the defect or malfunction and proof of purchase as confirmed by showing a copy of the original dated sales receipt.

For any questions regarding your product or this warranty call: 1-888-999-4215

This warranty does *not* cover:

- Any product which has been subject to damage due to an act of God, misuse, neglect, accident, abuse, commercial use, or modification of, or to, any part of the product, including the antenna.
- Damage to external media such as DVD, CD, iPod, iPhone, MP3 players, and/or memory devices.
- Damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than the Manufacturer.
- Re-manufactured units, product sold AS IS or closeout product.

Under no circumstances shall the Manufacturer be liable for any loss (direct, indirect, incidental, foreseen, unforeseen, special or consequential) or for any damage arising out of, or in connection with, the use of this product.

This warranty is valid only in the United States and grants specific legal rights. You may also have other rights which vary from state to state.

The customer is responsible for costs incurred when shipping a return back to DPI, Inc.

NOTE: For products that contain internal memory for storage of music, data, etc., the amount of memory your operating system reports may vary from the stated memory of this device.

IMPORTANT: DO NOT RETURN THIS UNIT TO THE RETAIL STORE FOR SERVICE. INSTEAD, CALL 1-888-999-4215 FOR WARRANTY SERVICE INSTRUCTIONS.

Service Information

Phone: 1-888-999-4215

Email: prodinfo@gpx.com

Parts Email: partsinfo@dpi-global.com

Website: www.gpx.com

Version: v. 061108

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.gpx.com.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.gpx.com.

Garantie limitée de 90 jours

Le fabricant garantit ce produit à l'acheteur original pour être exempt de défauts de matériaux et de fabrication, dans des conditions normales, pour une période de 90 jours à compter de la date d'achat originale.

Le fabricant s'engage, à son gré au cours de la période de garantie, de réparer tout défaut de matériel ou de fabrication ou de fournir un produit réparé ou renouvelé produit de valeur équivalente en échange sans frais. réparation ou remplacement est soumis à la vérification du défaut ou de mauvais fonctionnement et une preuve d'achat ainsi que le confirme en montrant une copie de l'original du reçu de vente daté.

Pour toute question concernant votre produit ou de cet appel de garantie: 1-888-999-4215

Cette garantie ne couvre pas:

- Tout produit qui a été soumis aux dommages résultant d'un acte de Dieu, abus, négligence, accident, abus, utilisation commerciale, ou la modification de ou à destination d'une partie du produit, y compris l'antenne.
- Les dommages sur des supports externes tels que les DVD, CD, iPod, iPhone, lecteurs MP3, et / ou des dispositifs à mémoire.
- Les dommages dus à un mauvais fonctionnement ou l'entretien, la connexion à une alimentation inappropriée, ou tentative de réparation par quiconque autre que le fabricant.
- unités Re-construct, produit vendu TEL QUEL ou le produit clôture.

En aucun cas, le fabricant peut être responsable de toute perte (directs, indirects, accessoires, prévues et imprévues, particuliers ou consécutifs) ou de tout dommage découlant de, ou en relation avec l'utilisation de ce produit.

Cette garantie est valable uniquement aux États-Unis et des subventions des droits légaux spécifiques. Vous pouvez également avoir d'autres droits qui varient d'état à l'autre.

Le client est responsable des frais encourus lors de l'expédition d'un retour vers le DPI, Inc

NOTE: Pour les produits qui contiennent la mémoire interne pour le stockage de musique, de données, etc, la quantité de mémoire de votre système d'exploitation des rapports peut varier de la mémoire à déclarer de ce dispositif.

IMPORTANT: NE PAS RETOURNER L'APPAREIL AU MAGASIN DE DÉTAIL POUR LE SERVICE. APPELÉ PLUTÔT 1-888-999-4215 POUR INSTRUCTIONS SERVICE DE GARANTIE.

90 días de garantía limitada

El fabricante garantiza que este producto al comprador original de estar libre de defectos en materiales y mano de obra, en condiciones normales, durante un período de 90 días a partir de la fecha de compra original.

El fabricante está de acuerdo, a su elección durante el período de garantía, para reparar cualquier defecto de material o mano de obra o proporcionar a un producto reparado o restaurado de igual valor a cambio sin cargo alguno. Dicha reparación o sustitución está sujeta a la verificación del defecto o mal funcionamiento y prueba de compra como se confirma al mostrar una copia de la factura original de venta.

Para cualquier pregunta relacionada con su producto o esta garantía, llame: 1-888-999-4215

Esta garantía no cubre:

- Cualquier producto que haya sido expuestas a sufrir daños debido a un acto de Dios, mal uso, negligencia, accidente, abuso, uso comercial o modificación, o de cualquier parte del producto, incluyendo la antena.
- El daño a medios externos como DVD, CD, iPod, iPhone, reproductores de MP3, y / o dispositivos de memoria.
- Los daños provocados por una operación o el mantenimiento, la conexión a un voltaje incorrecto, o intento de reparación por cualquiera que no sea el fabricante.
- Re unidades de fabricación, los productos vendidos TAL COMO ESTÁN o producto de la liquidación.

En ningún caso el fabricante será responsable de cualquier pérdida (directa, indirecta, incidental, previsto e imprevisto, especial o consecuente) o por cualquier daño que surja de o en conexión con el uso de este producto.

Esta garantía es válida sólo en los Estados Unidos y otorga derechos legales específicos. Usted también puede tener otros derechos que varían de estado a estado.

El cliente es responsable por los costes de envío cuando se volvía a utilizar el DPI, Inc.

NOTA: Para los productos que contienen la memoria interna para almacenamiento de música, datos, etc, la cantidad de memoria el sistema operativo informes pueden diferir de los previstos por la presente la memoria del dispositivo.

IMPORTANTE: NO DEVUELVA ESTE TEMA A LA TIENDA POR MENOR POR EL SERVICIO. LUGAR, LLAME A 1-888-999-4215 DE INSTRUCCIONES DE SERVICIO DE GARANTÍA.

Powering the Unit

- Use the AC Power Input to connect an AC adapter to the unit. Plug the other end of the AC adapter into a standard AC outlet (120V ~60Hz).



Setting the Time

- Step 1:** Press and hold the **Time Button**.
- Step 2:** Press the **Hour Button** to adjust the hour.
- Step 3:** Press the **Minute Button** to adjust the minute.
- Step 4:** Release the **Time Button** to set the adjusted time.

Setting the Alarm

- Step 1:** Press and hold the **Alarm Button**.
- Step 2:** Press the **Hour Button** to adjust the hour.
- Step 3:** Press the **Minute Button** to adjust the minute.
- Step 4:** Release the **Alarm Button** to set the adjusted alarm time.
- Step 5:** Adjust the **Auto/Off/On Switch** to the “Auto” position.
- Step 6:** Turn the **Volume/Buzzer Dial** towards “Buzzer” until the dial won’t turn anymore to set the alarm to wake to the buzzer.
- Step 7:** Turn the **Volume/Buzzer Dial** to the desired volume level to wake to the radio.
 - When waking to the radio, the unit will play whichever radio station the unit was last set to.
- Step 8:** After the alarm sounds, press the **Snooze Button** to delay the alarm for an additional 9 minutes.

Setting the Sleep Timer

- Step 1:** Tune the radio to the desired station.
- Step 2:** Press and hold the **Sleep Button**.
- Step 3:** Press the **Hour Button** to adjust the hour.
- Step 4:** Press the **Minute Button** to adjust the minute.
- Step 5:** Release the **Sleep Button** to set the adjusted sleep time.
 - If the Sleep Button is pressed after the sleep time has been set, the adjusted sleep time will be reset to the default of 59 minutes.

Tuning the Radio

- Step 1:** Adjust the **Auto/Off/On Switch** to the “On” position.
- Step 2:** Adjust the **FM/AM Switch** to the desired option.
- Step 3:** Turn the **Tuning Dial** to adjust the current radio station.
 - The Radio Frequency Indicator, located on the front of the unit, will display the current radio station.
- Step 4:** Turn the **Volume/Buzzer Dial** to adjust the volume of the unit.

Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFETY INSTRUCTIONS

- Read Instructions** - All the safety and operating instruction should be read before the product is operated.
- Retain Instructions** - The safety and operating instruction should be retained for future reference.
- Heed Warnings** - All warning on the product and in the operating instructions should be adhered to.
- Follow instructions** - All operating and use instructions should be followed.
- Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.
- Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Accessories** - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer’s instructions, and should use a mounting accessory recommended by the manufacturer.
- A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

See figure:



- Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer’s instruction have been adhered to.
- Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
- Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizes plug.

Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.
- Protective Attachment Plug** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.
- Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
- Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power-supply cord or plug is damaged,
 - If liquid has been spilled, or objects have fallen into the product,
 - If the product has been exposed to rain or water,
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - If the product has been dropped or damaged in any way, and
 - When the product exhibits a distinct change in performance - this indicates a need for service.
- Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Battery shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

See figure:

