

Portable DVD Player with 9" LCD Screen

User's Guide for Model PD951 v1821-01



Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings and Precautions

- **CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.**
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING: Shock hazard - Do Not Open.**
- **WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.**
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **CAUTION: Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.**
- **WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**
- **WARNING: Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.**
- **WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.**
- **CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.**
- **WARNING: There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.**
- Lithium batteries, like all rechargeable batteries, are recyclable and should be recycled or disposed of according to state and local guidelines. They should never be incinerated, as they might explode. Contact your local government for disposal or recycling practices in your area.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Caution marking is located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

- **WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.**
- This product meets and complies with all Federal regulations.

WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.



Warning: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

Functions & Controls

 
 
Power and Charging the Internal Battery

DC Power input: requires an AC/DC adapter, or 12V DC car adapter (included).

TO POWER THE UNIT, plug the included **AC/DC adapter** into the unit and a standard wall outlet. For use in a car, plug the **12V DC car adapter** into the unit and a standard 12V Power outlet in the car.

The **Power Indicator** will turn green whenever the portable DVD player is Powered ON.

The **Charge Indicator** will turn red whenever the battery is charging.

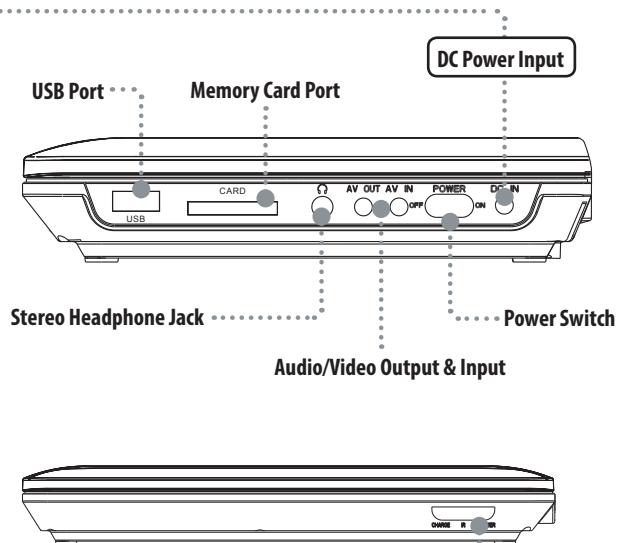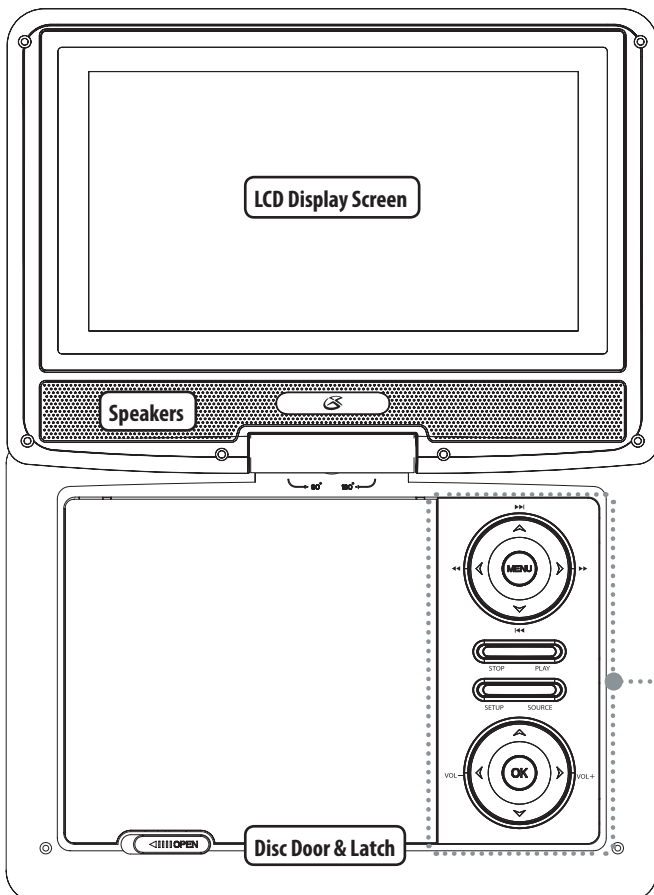

Menu

Press to access the DVD menu.

Arrows

Press to navigate menus.

Skip Back/Fwd/F. Fwd/Rev

Press to skip between chapters or tracks.

Press to fast forward or reverse.

Play/Pause

Press to play or pause the loaded disc.

Stop

Press to stop play of the loaded disc.

Setup

Press to access the setup menu.

Source

Press to select DVD/AV In/MCR/USB.

Volume/OK/Arrows

Press to select and navigate on-screen menus.

Press and hold to adjust the volume.

Charge Indicator

Turns red when the portable DVD player is charging and off once the unit is fully charged.

IR Remote Receiver

 
 
Power Indicator

Turns green when the portable DVD player is powered ON.


Remote

Remote Battery

Requires two AAA batteries (included).

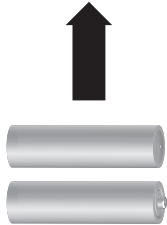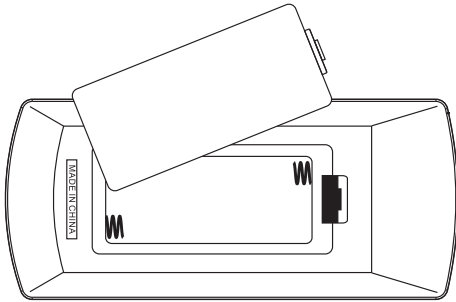

- Display ON/OFF**
Press to turn the screen ON or OFF.
- Title**
Press to access title menu for DVD.
- Menu**
Press to access a DVD's main menu.
- Skip Back/Fwd**
Press to skip between chapters or tracks.
- Arrows/Enter**
Press to make selections in the on screen or disc menus.
- Setup**
Press to access the setup menu.
- Number Keypad**
Enter chapter/title to play.
- A-B**
Press to create a repeating loop on a loaded DVD.
- Program**
Press to program a loaded disc to play chapters or tracks in a specified order.
- Zoom**
Press to zoom in or out on a playing DVD.

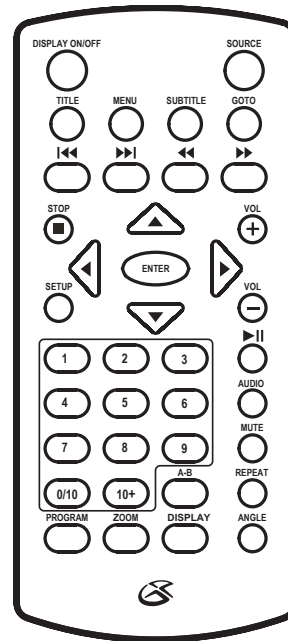 

- Source**
Press to select DVD/AV In/MCR/USB.
- Subtitle**
Toggle subtitles ON or OFF.
- Go To**
Press and enter a track, chapter, title or time to skip directly to a point on the disc.
- Rewind/F. Fwd**
Press to search through an individual chapter or track.
- Volume +/-**
Play/Pause
Audio
Press to adjust the current audio settings for the loaded DVD.
- Mute**
Press to mute the volume.
- Display**
Displays current title and menu information.
- Repeat**
Press to repeat the current track or selection.
- Angle**
On supported DVDs, press and hold to view alternate angles.

Connecting & Playing Media

Accessing the Setup Menu

To access the Setup Menu, press the **Setup** button on the player or the remote.

Loading and Playing a Disc

- Slide the **Open** latch to open the **Disc Door**.
- Load a disc into the **DVD player**, label side facing up. Close the **Disc Door**. After a disc is loaded, it will begin playing automatically.
- If the disc does not begin playing automatically, press the **Play/Pause** button.

Programming a Loaded Disc

- While the loaded disc is playing, press the **Program** button on the remote.
- Use the **Arrow** buttons to select a program slot.
- Use the **Number Keypad** to enter in the chapter and title, or track.
- Titles and chapters, or tracks will play in the order they are listed.
- Repeat step 3 until the desired titles and chapters, or tracks are programmed.
- Use the **Arrow** buttons to highlight the on-screen **START** button. Press the **OK** button to begin playing the programmed disc.

Connecting a Memory Card

AVI, VOB, MPEG 1, MPEG 2 and MPEG 4 video formats are supported. *Note: Formats are not universally compatible. Playback may be dependent on recording conditions.*

- Connect a **SD or MMC memory card** to the **Memory Card Slot**.
- Press the **Source** button to enter the **DVD/AV In/MCR/USB** menu.
- Use the **Up/Down Arrow** and **Enter** buttons to select **MCR mode** and play content from the connected memory card.

Connecting a USB Thumb Drive

AVI, VOB, MPEG 1, MPEG 2 and MPEG 4 video formats are supported.

- Connect a **USB thumb drive** to the **USB Port**.
- Press the **Source** button to enter the **DVD/AV In/MCR/USB** menu.
- Use the **Up/Down Arrow** and **Enter** buttons to select **USB mode** and play content from the connected USB thumb drive.

Using the 3.5mm AV Input

Requires a 3.5mm to 3 x RCA audio/video cable (included).

- Connect the 3.5mm to 3 x RCA audio/video cable to the **AV Input** on the unit and the composite video outputs on an audio/video source, such as a TV.
- Press the **Source** button to enter the **DVD/AV In/MCR/USB** menu.
- Use the **Up/Down Arrow** and **Enter** buttons to select **AV In mode**. Audio/video played on the connected source will now be output to the portable DVD player.

Using the 3.5mm AV Output

Requires a 3.5mm to 3x RCA audio/video cable (included).

- Connect the 3.5mm to 3x RCA audio/video cable to the **AV Output** on the unit and the **RCA stereo audio inputs** and **composite video input** on a television.
- Audio and video played on the portable DVD player will now be output to the connected television.

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com

Customer Service: 1-888-999-4215 | Email Support: prodinfo@dpiinc.com | Email Parts: partsinfo@dpiinc.com

Copyright © 2016 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



Protect for Today
Sustain for Tomorrow