


Quickstart Guide




Connecting the Stand

When placing the TV on a flat surface, be careful not to push, scratch, or otherwise damage the front of the TV and screen. We recommend covering the surface with a blanket or towel first. Use a screwdriver to tighten the screws by hand, using a power drill could damage the TV stand.

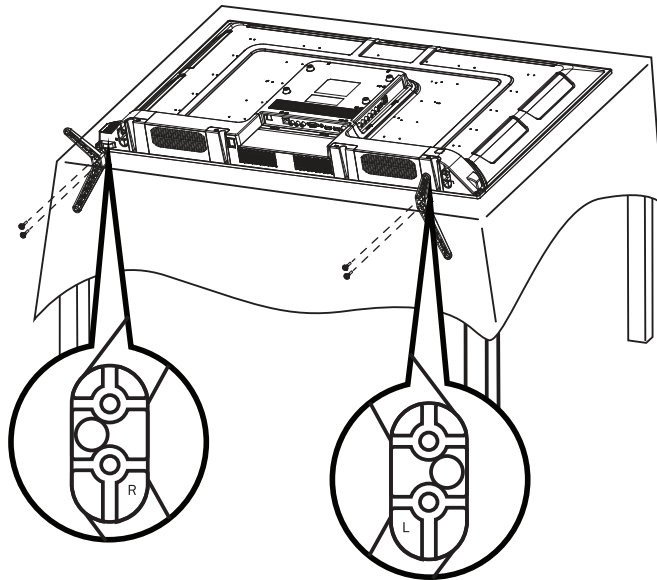

Power

AC power input: plug the AC power cord into a standard wall outlet.

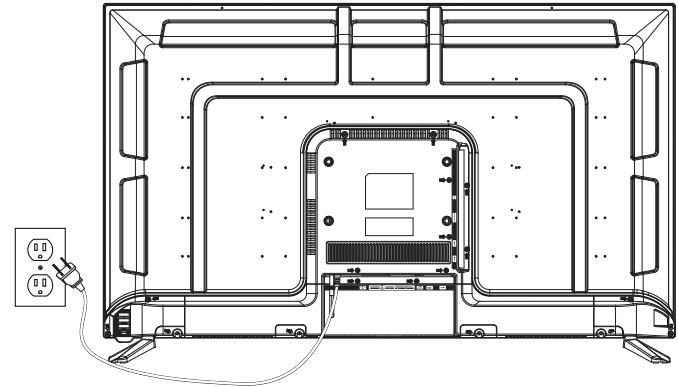

Connecting Cable/TV Antenna

Requires a cable/antenna wire (not included).

1. Connect the **cable/antenna** wire to the input on the television.
2. Press the **Source** button to switch to **TV mode**.
3. Press the **Setup** button to access the setup menu.
4. Press the **Arrow** (◀ ▶) buttons to highlight the **Channel** icon and press **Enter**.
5. Press the **Arrow** (▲ ▼) buttons to highlight **Air/Cable**. Press the **Arrow** (◀ ▶) buttons to select **AIR or Cable**.
6. Press the **Arrow** (▲ ▼) buttons to highlight **Auto Scan**. Press **Enter** to begin scanning for available channels. *Note: initial channel scanning process may take up to 15 minutes.*

Connecting a Media Player/Streaming/Gaming Device

If the Device has an HDMI Output:

- Connect the HDMI output on the Device to the **HDMI input** on the television using an HDMI cable (not included).

If the Device has a Composite Video Output:

- Connect the video output on the Device to the **Composite Video input** on the television using an A/V RCA cable (not included).
- Connect the audio output on the Device to the **RCA audio input** on the television.

If the Device has a Component Video Output:

- Connect the video output on the Device to the **Component Video input (YPbPr)** on the television using a component cable (not included).
- Connect the audio output on the Device to the **RCA audio input** on the television using a stereo audio cable.

After Connecting Your Device:

- Press the **Source** button to switch to **HDMI 1/2/3/4, YPbPr or AV**.