
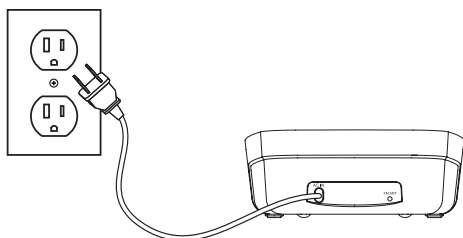
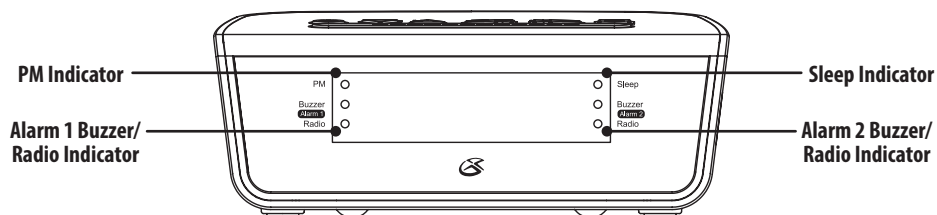



# Clock Radio with Dual Alarms

User's Guide for Model C224 v1955-01

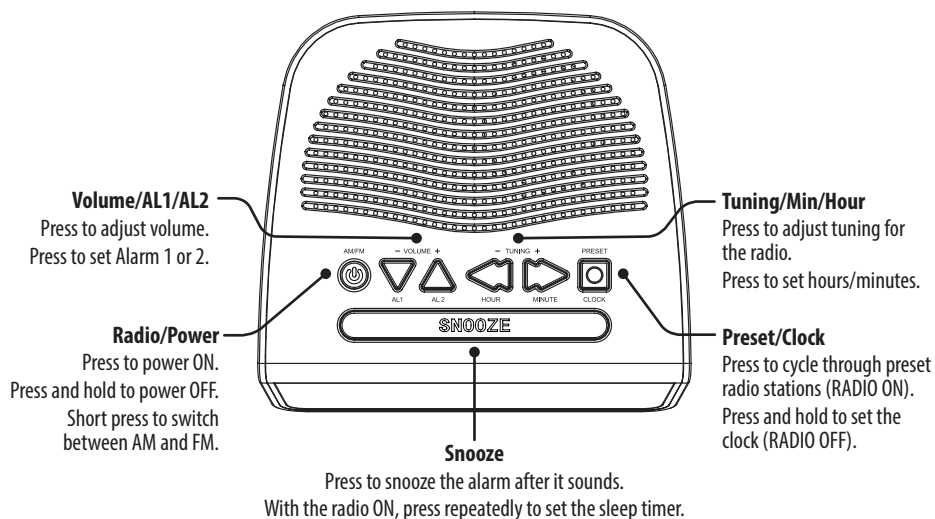

## Power

Plug the power cord into a standard power outlet.

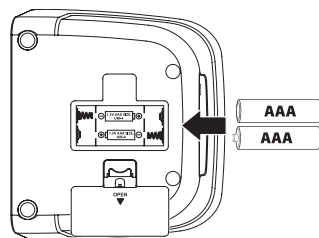

## Battery Backup

The battery backup is intended for short power outages only. The clock radio's primary functions cannot run off of the battery backup alone. Requires 2 AAA-size, batteries (not included).

---

## Clock / Sleep Timer

---

### Setting the Clock

1. Press and hold the **Preset/Clock** button until the display begins flashing.
2. Press the **Hour and Minute** buttons to adjust the time. The **PM indicator** will light when the hour is set in the PM.
3. Press the **Preset/Clock** button again to finish, or wait for the display to stop flashing.

### Setting the Sleep Timer

1. Power the radio and press the **Snooze** button to adjust the timer ( 90, 80, 70, 60, 50, 40, 30, 20, 10 min or OFF ).
2. Once the set sleep time has expired the clock radio will automatically power off.

---

## Alarm

---

### Setting the Alarm

1. In off mode, press the **AL1 or AL2** buttons to set Alarm 1 or Alarm 2.
2. The screen will flash and display the time the alarm is set to go off. Press the **Hour and Minute** buttons to set the desired time. Note the **PM indicator**.
3. Press the **AL1 or AL2** buttons repeatedly to switch between **Radio, Buzzer or off**. Wait for the display to stop flashing.
4. Once the set alarm time is reached, the alarm will sound. Press the **Power** button to turn the alarm off until the set alarm time is reached again.
5. To set the other alarm, follow the above steps and choose the alarm not currently set.

### Snooze and Alarm Reset

After the alarm sounds:

- Press the **Snooze** button to delay the alarm for an additional 9 minutes.
- OR*
- Press the **Power** button to turn the alarm off until the set alarm time is reached again.

---

## Radio

---

### Radio Reception

To improve radio reception, adjust the position of the unit.

### Tuning the AM or FM Radio

1. Power on the radio and press the **Power** button again to switch between the **AM and FM** radio mode.
2. Press the **Tuning ±** buttons to find the desired radio frequency.
3. Press the **Volume ±** buttons to adjust the volume of the radio.

### Saving a Station as a Preset

1. With the radio on, tune to your desired frequency, press and hold the **Preset/Clock** button until the screen flashes.
2. Press the **Tuning ±** buttons to choose the desired preset station, 1 through 10.
3. Press the **Preset/Clock** button again to set the frequency to that preset station.
4. The unit will store 10 FM and 10 AM radio station presets. Once set, press the **Preset/Clock** button to cycle through your preset stations.

---

## Customer Support

---

**Customer Service:** 1-888-999-4215 | **Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com) | **Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)

For Safety Information, refer to the included Safety Information & Warnings document. The Safety Information & Warnings document should be retained for future reference.

For Warranty Information and the most up-to-date version of this User's Guide, go to [www.gpx.com](http://www.gpx.com)

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: [www.gpx.com](http://www.gpx.com)

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: [www.gpx.com](http://www.gpx.com)

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: [www.gpx.com](http://www.gpx.com)

Copyright © 2017 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

---