

Clock Radio with Dual Alarm

User's Guide for Model C224B v981-01



FCC Warnings

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.
- WARNING: This product may contain chemicals known to the State of California to cause birth defects, or other reproductive harm (California Prop 65). Wash hands after handling.
- This product meets and complies with all Federal regulations.



FUNCTIONS AND CONTROLS

Battery Backup

The battery backup is intended for short power outages only. The clock radio's primary functions cannot run off of the battery backup alone. Requires 2, AAA-size, batteries (not included).


Power

Plug the AC/DC power adapter (included) into the **DC Power Input** on the unit, and a standard power outlet.

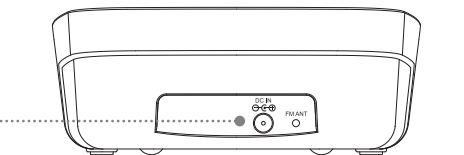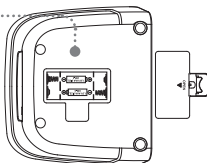

PM Indicator

LED Display

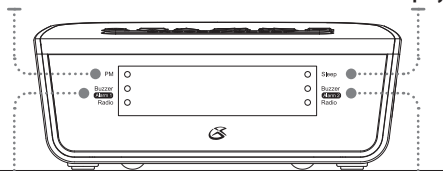


Alarm 1 Buzzer/ Radio Indicator

Alarm 2 Buzzer/ Radio Indicator

Volume/AL1/AL2
Press to adjust the volume.
Press to begin setting
Alarm 1 or Alarm 2.

Radio/Power
Press to power on the Radio.
Press and hold to power off
the Radio. Press briefly
to switch between AM
and FM bands.

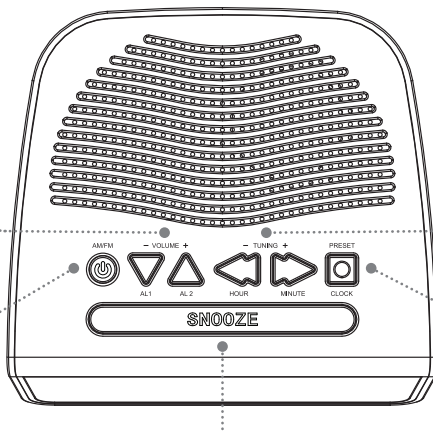

Tuning/Min/Hour
Press to tune the radio.
Press to adjust the minute
or hour when setting
the clock or alarm.

Preset/Clock
With the Radio on, press to
cycle through preset radio
stations. In off mode, press and
hold to adjust the clock.

Snooze

Press to snooze the alarm after it sounds.
In on mode, press repeatedly to set the sleep timer.

CLOCK AND SLEEP TIMER

Setting the Clock

1. Press and hold the **Preset/Clock** button until the display begins flashing.
2. Press the **Hour and Minute** buttons to adjust the time. The **PM indicator** will light when the hour is set in the PM.
3. Press the **Preset/Clock** button again to finish, or wait for the display to stop flashing.

Setting the Sleep Timer

1. Power the radio and press the **Snooze** button to adjust the timer (90, 80, 70, 60, 50, 40, 30, 20, 10 min or OFF).
2. Once the set sleep time has expired the clock radio will automatically power off.

RADIO

Radio Reception

Adjust the position of the FM Antenna to improve FM radio reception. An AM antenna is built into the clock radio. To improve AM radio reception, adjust the position of the clock radio.

Tuning the AM or FM Radio

1. Power on the radio and press the **Power** button again to switch between the **AM and FM** radio mode.
2. Press the **Tuning ±** buttons to find the desired radio frequency.
3. Press the **Volume ±** buttons to adjust the volume of the radio.

Saving a Station as a Preset

1. With the radio on, tune to your desired frequency, press and hold the **Preset/Clock** button until the screen flashes.
2. Press the **Tuning ±** buttons to choose the desired preset station, 1 through 10.
3. Press the **Preset/Clock** button again to set the frequency to that preset station.
4. The unit will store 10 FM and 10 AM radio station presets. Once set, press the **Preset/Clock** button to cycle through your preset stations.

ALARM

Setting the Alarm

1. In off mode, press the **AL1 or AL2** buttons to set Alarm 1 or Alarm 2.
2. The screen will flash and display the time the alarm is set to go off. Press the **Hour and Minute** buttons to set the desired time. Note the **PM indicator**.
3. Press the **AL1 or AL2** buttons repeatedly to switch between **Radio, Buzzer or off**. Wait for the display to stop flashing.
4. Once the set alarm time is reached, the alarm will sound. Press the **Power** button to turn the alarm off until the set alarm time is reached again.
5. To set the other alarm, follow the above steps and choose the alarm not currently set.

Snooze and Alarm Reset

After the alarm sounds:

Press the **Snooze** button to delay the alarm for an additional 9 minutes.

OR

Press the **Power** button to turn the alarm off until the set alarm time is reached again.

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:
www.gpx.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur:
www.gpx.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: **www.gpx.com**

